




Grown...to meet challenges

# INSTRUCTION MANUAL

## SLA-SERIES

Admittance Level Limit Switch

Version 2.1

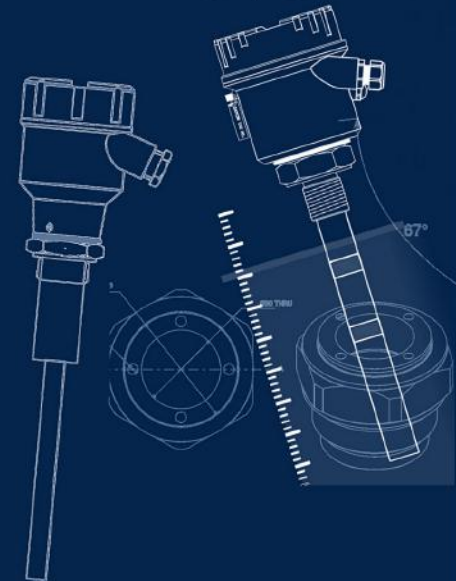

## SAPCON INSTRUMENTS PVT. LTD.

30+ Years in Process Control Instrumentation

An ISO 22000 company

[www.sapconinstruments.com](http://www.sapconinstruments.com)

# Contents

- Revision History . . . . . 3
- 1 Introduction . . . . . 4
- 2 Operating Principle . . . . . 4
- 3 Measuring System . . . . . 4
- 4 Features . . . . . 4
- 5 Applications . . . . . 4
- 6 System Description . . . . . 4
- 7 Evaluation Unit (Standard) . . . . . 6
  - 7.1 Electrical Specifications . . . . . 6
  - 7.2 Mechanical Specifications . . . . . 6
- 8 Electronic Insert (ICA-3000A) . . . . . 7
- 9 Probe . . . . . 7
- 10 Installation and Handling Guidelines . . . . . 8
- 11 Connection . . . . . 8
- 12 Calibration . . . . . 9
- 13 Calibration procedure For Fail-Safe High . . . . . 9
- 14 Calibration Procedure For Fail-Safe Low . . . . . 10
- 15 Customer Support . . . . . 10

# List of Figures

- 1 SLA . . . . . 4
- 2 Description of Parts . . . . . 4
- 3 System Diagram . . . . . 5

# List of Tables

- 1 Electrical Specifications . . . . . 6
- 2 Mechanical Specifications . . . . . 6
- 3 Electronic Insert . . . . . 7
- 4 Probe . . . . . 7

## Revision History

Revision	Date	Author(s)	Description
1.0	10 Jan 2014	RND	First Version Editing
1.1	20 Sep 2014	MRK	Applications Revision
1.2	26 Jun 2015	RND	Features Revision
1.3	18 Dec 2015	RND	Specs Revision
1.4	19 Jul 2016	RND	Specs Revision
2.0	08 Jan 2017	BRND	Revised Format
2.1	17 Sep 2017	BRND	Branding Revisions

1

1

- **Copyright:** All content on this document, such as text, graphics, logos and images is the property of Sapcon Instruments Pvt. Ltd. The selection, arrangement and presentation of all materials on this document and the overall design of this document is the exclusive property of Sapcon Instruments Pvt. Ltd.
- The images shown in this manual may differ from the actual instrument / housing in terms of dimensions, color and design. Please refer to GA drawings for dimensional details.
- Values (of performance) described in this manual were obtained under ideal testing conditions. Hence, they may differ under industrial environment and settings.

### General Instructions

- Instrument shouldn't block the material filling inlet.
- Secure the cover of housing tightly. Tighten the cable glands. For side mounting, the cable glands should point downwards.
- For side mounting, provide a baffle to prevent the material from falling on the probe.
- When handling forks, do not lift them using their tines. While using them with solids, ensure that material size is less than 10mm.
- Deforming the shape of the tines may interfere with the fork's operating frequency.
- Make all electrical connections as instructed in the manual. Don't power on the device before verifying the connections.

## 1 Introduction

SLA is a admittance level limit switch utilizing specially designed immuno coat probe offers a reliable solution to level detection problems so far difficult to solve with capacitance type system utilizing conventional 2 element probes. It consists of an evaluation unit, an electronic insert and a probe. The probe is mounted either from top or side of the vessel. The probe comprises sense and shield electrodes, electrically isolated from the metallic tank by the means of a suitable insulator. The two electrodes form an imperfect capacitor with the service material acting as the dielectric. Admittance measurement using immuno coat probe give satisfactory solutions in tough environments such as where;

- Conductive or non-conductive material coats the probe.
- There is bridging of material between probe and side wall.
- Material particles with electrostatic charge and varying temperature float in the vicinity of the Probe.



Figure 1: SLA

## 2 Operating Principle

The Sensitive portion of the probe and the container wall (or ground electrode) form a means to measure the admittance of the system with and without the intervening material. When all the parameters that affect the admittance value are kept constant then its value changes only due to the difference in material level. This change after amplification is used to operate a relay, the output contacts of which are used for signaling or control.

## 3 Measuring System

The complete admittance system comprises of the following:

- Probe of special construction immuno coat system.
- Electronic Insert ICA-3000A in plastic housing, fully potted with epoxy resin.
- Evaluation Unit type LEVTESTER - SLA...Series.

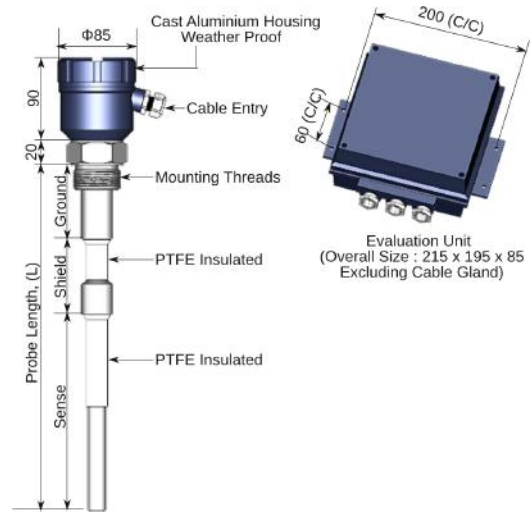


Figure 2: Description of Parts

## 4 Features

- Ingress Protection of IP67.
- Coating Immunity specially for sticky and viscous media.
- Universal Supply: 90 - 265V AC and 18V DC.
- Available in Integral as well as remote models.
- Customized mountings and probe lengths.
- Calibration possible from remote location.

## 5 Applications

- Food Industries & FMCG
- Sugar Industry
- Packaging Industry
- Foundry & Castings
- Soya Industry
- Bulk Material Handling
- Flour and Rice Mills

## 6 System Description


**PROBE:** The probe offers special construction with two concentrically positioned electrodes, that are isolated from each other and ground (Refer to Figure 2). The innermost electrode serves as the sense electrode whereas the next one is shield and the outermost is ground. Due to the typical geometric configuration of the electrodes and the maintenance of equi-potential

and equi-phase relation between the sense and shield waveforms a high degree of immunity to probe coating and build-up achieved. The probe head is of cast aluminium construction and is fitted on the probe extension, away from heat. It is provided with a suitable mounting arrangement of the screwed or flanged type (as per order).

**ELECTRONIC INSERT:** The electronic insert can either be directly mounted in probe housing or remotely installed in a separate housing. The electronic insert comprises of an RF Oscillator, Detector and Coat Immunizing circuitry all encased in a plastic housing and potted with epoxy resin. Built-in terminals on electronic insert facilitate interconnections. The Insert is further housed in a cast aluminium housing provided with a suitable entry and houses a high voltage discharge device (Optional).

**EVALUATION UNIT:** The evaluation unit consists of a step down transformer, rectifier, voltage regulator, oscillator, probe immunizing circuitry, set point adjusting capacitor, relay driving circuitry, fail-safe selection LED Indicator and Relay. In case of time delay model, a separate timing mode selection switch and pot is provided for delay setting. The electronics along with interconnecting terminals is assembled on a glass epoxy PCB heavily lacquered for rendering it immune to moisture, dust and fungus.

The card in turn is mounted in a cast aluminium weather proof housing, stoved enamel painted & provided with 3 nos. of cable entries. The measuring electrode and shield are connected to a radio frequency source. Due to the geometry of construction and immuno coat circuitry, RF current does not flow between the measuring electrode and shield. Current can, however, flow between the shield and mounting (ground) which being out of the measuring circuit does not effect indication. The only path left for the current to flow through is the admittance path via the material to the vessel wall (ground). This being the only path of interest, the system gives a reliable indication of level.

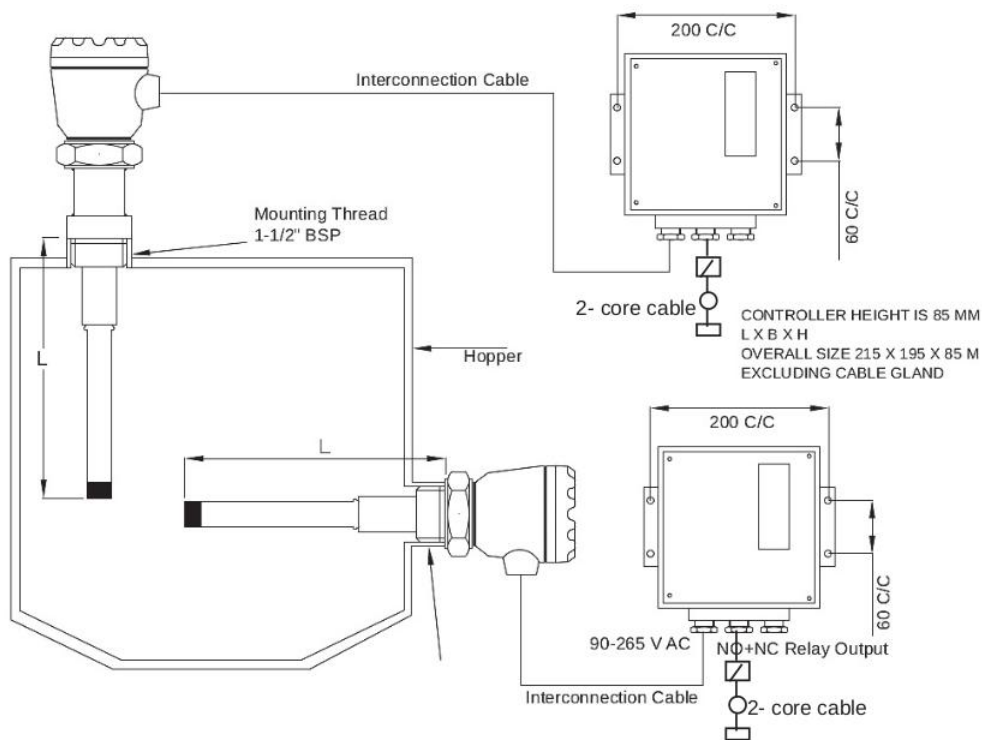

Note: Interconnection Cable - Normal 3-core 1.5 sq mm cable

Figure 3: System Diagram

## 7 Evaluation Unit (Standard)

### 7.1 Electrical Specifications

Please refer to Table 1 for Electrical Specifications.

PARAMETER	VALUE
Input Power Supply	18 - 55 V DC and 90 - 265 V AC on same terminal
Output	One set / Two sets of potential free c/o contacts rated at 5 Amps, 230 V AC for non-inductive loads
Switching Indication	<ul style="list-style-type: none"> <li>• Red LED - Alarm</li> <li>• Green LED - Normal</li> <li>• Yellow LED - System Fault</li> </ul>
Power Consumption	5 W
Response Time	1 to 3 seconds
Failsafe Mode	Max. or Min. (Field Selectable)
Time Delay Setting	1 - 25 sec. (For Covered and Uncovered Both)

Table 1: Electrical Specifications

### 7.2 Mechanical Specifications

Please refer to Table 2 for Mechanical Specifications.

PARAMETER	VALUE
Housing	<ul style="list-style-type: none"> <li>• RB : Cast Aluminium weather proof powder coated paint IP-65</li> <li>• SQP : Cast Aluminium weather proof powder coated paint IP-65 (Square Probe Mounted)</li> <li>• FP2A : Cast Aluminium weather &amp; flame proof powder coated paint suitable for gas group IIA &amp; IIB as per IS 2148</li> <li>• SNSR : Pressure Die Cast Aluminium weather proof IP-66</li> </ul>
Electrical Connector	1/2", 3/4" BSP / NPT
Cable Gland Type	Single / Double Compression
Operating Temperature	Up to 60°C

Table 2: Mechanical Specifications

## 8 Electronic Insert (ICA-3000A)

Please refer to Table 3 for Electronic Insert Specifications.

PARAMETER	VALUE
Working Frequency	500 KHz (Approx)
Tolerable Ambient Temp.	-20°C to +80°C
Supply Voltage	15 V DC from Evaluation Unit
Output Signal	3 - 12 V DC
Weight	125 Gms. (Approx.)

Table 3: Electronic Insert

## 9 Probe

Please refer to Table 4 for Probe Specifications.

PARAMETER	VALUE
Housing	<ul style="list-style-type: none"> <li>• RB : Cast Aluminium weather proof powder coated paint IP-65</li> <li>• SQP : Cast Aluminium weather proof powder coated paint IP-65 (Square Probe Mounted)</li> <li>• FP2A : Cast Aluminium weather &amp; flame proof powder coated paint suitable for gas group IIA &amp; IIB as per IS 2148</li> <li>• SNSR : Pressure Die Cast Aluminium weather proof IP-66</li> </ul>
Cable Entry	1/2" / 3/4" BSP / NPT, Brass
Cable Gland Type	Single / Double Compression Gland
Mounting	<ul style="list-style-type: none"> <li>• Screwed - 1" / 1 1/2" BSP / NPT</li> <li>• Flanged - As per your requirement</li> </ul>
Insulation	Part / Full PTFE / Ceramic
Working Temp.	Up to 1000°C (Maximum)

Table 4: Probe

## 10 Installation and Handling Guidelines

- PROBE** - The mechanical construction of the probe differs from application to application. Standard methods of mounting are screwed or flanged. A 1" BSP Mounting Bush (standard) is provided for screwing on to the container having a threaded flange fitted with the probe has to be bolted on to matching flanged welded to a pipe which in turn is fixed to the container. The construction and size of the mounting bush / flange as well as material of mounting bush / flange depends on the application. Depending on the application rod probes can be either mounted from the top of the container or from the side of the container. Rope probes have to be mounted from the top only. For installing rod probes from the top of the containers, sufficient clearance between the roof and tank top is necessary as the probe has to be hoisted-up over the tank top during installation. Accurate length adjustments can be made at site for part insulated rod or rope probes by sawing off additional length from the bottom of the probe. In the case of fully insulated probes, this is not possible. If the container material is turbulent, rope probe may sway excessively. They can be anchored to the container and a special weight with the provision for anchoring is provided. The cable entry gland in the case of side mounted rod probe should always face downwards.
- ELECTRONIC INSERT** - The Electronic Insert ICA-3000A is fitted in the probe head by means of single screw. It can operate satisfactorily up to a ambient temp. of 80°C. If the ambient temp. exceeds this the insert has to be mounted away from the container in a special cast aluminium weather proof housing and interconnected by screened cable. Thereby the initial admittance is increased by the amount of the admittance of the screened cable.
- EVALUATION UNIT** - The Evaluation Unit is suitable for back panel mounting. Refer mounting details diagram for hole locations in the back panel and drill holes accordingly. Remove instrument cover by unscrewing the four screws provided on front cover. Box fixing holes will be clearly visible on the box bottom, above and below card. Mounting hardware consisting of 4 nos. of M4 cheese head screws have rubber 'O' rings to render the box dust tight after fitting. After installation the cover should be re-fitted to avoid dust ingress. The housing is suitable for outdoor installation. However, in no case should the instrument be subjected to temperature exceeding 60°C. Through the instrument can be installed outdoors, it should never be subjected to direct sun rays. Preferably a sun shade should be provided.

## 11 Connection

- ELECTRONIC INSERT** - ICA-3000A : Ordinary three core cable of core cross-section 1.5mm<sup>2</sup> & resistance per core less than 25 ohms can be used to connect the Electronic Insert to the Evaluation Unit since only DC proportional to admittance change is transmitted over the line. In the case of direct mounting of Electronic Insert in the Probe, connection to the measuring electrode is made by the single mounting screw. The ground wire is connected to terminal 6 of the Insert. Wire from the shield electrode is connected to terminals 5 of the Insert. Additional ground terminals is provided on the outside of the housing for connecting to external earth. In case the Insert is remotely mounted in a separate housing the connection to the Evaluation Unit can be made by ordinary three core cable as above but the connection to the measuring and shield electrode should be made with two core shield cable with teflon insulation. The length of the cable should be restricted to a maximum of 3 mtrs. as the admittance of the cable adds up to the probe admittance.
- EVALUATION UNIT** - Refer enclosed drawing for connecting ICA-3000A to SLA-122/222/322/622/722 connect appropriate mains supply to terminals 1, 2 and 3 in the sequence Line (L), Neutral (N) and Ground (G) respectively. In case of 110 V AC operation, 110 V AC sticker is pasted on the card.

**CAUTION** - Connecting 230 V AC mains to instruments meant for 110 V AC operation can cause permanent damage. Terminals 4, 5 and 6 are Relay output contacts of standard version. Terminals 7, 8 and 9 are optional Relay output contacts available in special models. Contact position shown in the enclosed diagram is in normal condition when green LED glows. Terminals 12, 13 and 14 are for connecting to Electronic Insert-ICA 3000A. Terminals 12 and 14 supply 15 V DC for the operation of the electronic circuitry in the Insert. Terminal 12 being the DC ground (zero V) and terminal 14 (+15 V DC). Terminal 13 receives the signal in the form of DC Voltage variation proportional to the change in admittance as a result of level change. Terminals 12, 13 and 14 of the Evaluation Unit should be connected to terminals 2, 1 and 3 of the Electronic Insert respectively. Connections can be made by means of ordinary 3 core cable of core cross-section not exceeding 2.5 mm<sup>2</sup>.

Maximum allowable cable length is that length where in the resistance per core does not exceed 25 ohms.

- CONNECTION OF ALARM UNIT** - Audio/Visual alarm annunciators can be connected to



the Evaluation Unit. A set of single change-over potential free relay contacts rated at 6 amps, 230 V AC for non-inductive loads are provided for the purpose. Required contacts should be selected after referring enclosed diagram that show the dependence of relay operation/indication on fail safe mode and level.

- **FAIL SAFE OPERATION** - Instrument operation is supposed to be fail safe if alarm condition is signaled by the relay in the de-energized condition. This necessitates a change in the state of the relay when the instrument is used for high or low alarm as the conditions are opposite. Fail safe select switch is provided just for this purpose. When the instrument is used for high level alarm the switch should be in fail safe high position whereas for low level alarm it should be in fail safe low position. It should be noted that the output contacts will change positions as per fail safe selection. Connections to external alarms should be made accordingly. Red and Green LED's indicate Alarm and Normal operation. Red LED glows when the relay is in de-energized position.

## 12 Calibration

Calibration controls are accessible after opening the Evaluation Unit cover.

**A. SLA 122 / 222** - Calibration is done with the probe uncovered. Clearance between the probe and material should be at least 100 mm.

- Make all connections as per connection diagram after reading the instructions under connection caption, and switch on the mains.
- Throw the fail safe selection switch to fail safe 'HI' position.
- Throw the range selection switch to range 'I' position.

### Calibration procedure for Fail-Safe High mode-

a) Turn 'sensitivity adj.' pot anti-clockwise to the extreme left position. Red LED goes ON.

b) Turn pot clockwise until Green LED goes ON.

c) If the Green LED does not glow even though the pot is turned fully clockwise, select next higher range i.e. range II. If green LED goes ON go through to next step. If green LED does not go ON select next higher range i.e. range III. LED would definitely go ON.

d) Turn sensitivity pot anticlockwise until red LED goes ON. Again turn sensitivity pot slowly clockwise until green LED just goes ON.

e) From this accurate switch point position, turn the pot a few degrees clockwise (Green LED remains ON), thereby setting the sensitivity to as table switching position.

f) The instrument is now calibrated. If it be possible to vary the material level in the vicinity of the switch point, the correctness of calibration can be confirmed.

### Calibration procedure for Fail-Safe Low mode-

a) After following similar instructions 4 (a) to (g) throw the fail safe select switch 'FSS' to fail safe 'LO' position.

b) The instrument is now calibrated. If it be possible to vary the material level in the vicinity of the switch point, the correctness of calibration can be confirmed.

**B. SLA 322 / 622** - Rotate time delay pot fully anti-clockwise (minimum delay position), then proceed as per calibration instructions for SLA 122 / 222 (Sr.No. 1 to 5).

Switching delay adjustment :

- Select delay mode by throwing the mode select switch to appropriate position-  
Position 'S' gives delay for probe uncovered condition.  
Position 'T' gives delay for probe covered condition.
- Set time delay approx. between 0.5 to 10/20 secs. by turning the time delay pot clockwise.

**C. SLA 722** - These models have built-in pump control logic. The switching hysteresis is continuously adjustable over the full range (wide differential).

Calibration procedure starts after filling the tank up to upper level point.

- Throw the fail safe select switch to fail safe 'HI'.
- Throw the calibration switch 'CAL' to position 'CA' position.
- Throw the range selection switch to position 'I'.

## 13 Calibration procedure For Fail-Safe High

1. Rotate pot ' $\Delta$ S' anti-clockwise to its extreme position.
2. Rotate pot for 'CA' clockwise to its extreme position. Green LED goes ON. Go to step 4.
3. If green LED does not go ON, select next higher range i.e. range II. If Green LED does not go ON select next higher range i.e. range III. Now Green LED will definitely glow. If it does not, contact us.

4. After Green LED glows, turn 'CA' pot slowly anti-clockwise until Red LED just goes ON.
5. Empty the tank up-to lower level point.
6. Throw the calibration switch 'CAL' to ' $\Delta$ S' position. Red LED glows.
7. Turn ' $\Delta$ S' pot slowly clockwise until green LED just goes ON.
8. Throw calibration switch 'CAL' to ' $\Delta$ S' position.

CAUTION - Do not move 'CA' or ' $\Delta$ S' pot here after.

## 14 Calibration Procedure For Fail-Safe Low

- After following similar instructions 4 (a) to (g) throw the fail safe select switch 'FSS' to fail safe 'LO' position.

The instrument is now calibrated. Ensure the calibration is correct by observing the filling and emptying cycle.

## 15 Customer Support

Thank you for going through the instructions given in this manual. To further ease the process of installation and use, we have developed special demo videos which are hosted on YouTube.

Sapcon's YouTube channel, SAPCON INSTRUMENTS, lists all these videos: <https://goo.gl/dnxfcz>

Should you require further information regarding installation, use or working of the instrument, please don't hesitate to contact us. Kindly provide the following information at the time of contacting:

- Instrument Model and Serial Number
- Purchase Order Number and Date of Purchase
- Description of the query
- Your contact details

In an attempt to serve you better, we are open seven days a week (9:30am to 7:30pm). We are available at:

- [www.sapconinstruments.com](http://www.sapconinstruments.com)
- [sales@sapcon.in](mailto:sales@sapcon.in)
- +91-731-4757575